

FILTER OVERVIEW WITH SERVICE INTERVALS

40 Series tractors

3 cyl.: 840, 940, 1040, 1140 • 4 cyl.: 1640, 1840, 2040, 2040S, 2140 • 6 cyl.: 3040, 3140, 3640, 3640S, 4040, 4040S, 4240, 4240S, 4440

CAB (without roof hatch)


AIR FILTER

(1640 - 3140 up to serial no. 429999)

- **L35904**

(low profile cab) - **L31410**

Please order 2

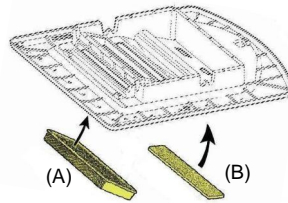

(1640 - 3140 from serial no. 430000;
3640, 3640S, 4040 - 4440, 4020S, 4420S)

L38598 (A)

R65450 (B)

(low profile cab) - **L42107**

Clean as required, replace **annually**

CAB


AIR FILTER

(940 - 1140; 1640 - 2040S from serial no. 430000)

L58629 (F)

L57264 (G)

Clean as required, replace **annually**

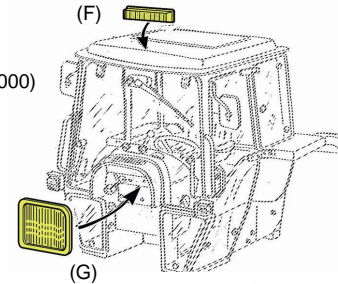

HYDROSTATIC STEERING

OIL FILTER, STEERING RETURN

(1640 - 3140) - **AL31413**

Replace **every 1.000 hours**

ENGINE

AIR PRECLEANER - ROTARY EJECTOR

(940 - 2040S) - **AL39934**

(2140 - 3640S) - **AZ24175**

Clean as required, replace **element annually or after six cleanings**

ENGINE

MAIN AIR FILTER ELEMENT

(840 - 2040S) - **AR84228** (length = 304.8 mm)

(2040S - 3640) - **DE17263** (length = 362 mm)

(3640S, 4040, 4040S, 4240) - **AR79941** (length = 378 mm)

(4240S, 4440) - **AR79679** (length = 425.5 mm)

Clean as required, replace **annually**

ENGINE

SAFETY ELEMENT - AIR FILTER

(840 - 2040S) - **AE31724** (length = 279 mm)

(2040S - 3640) - **CE16309** (length = 330 mm)

(3640S, 4040, 4040S, 4240) - **AR79942** (length = 330 mm)

(4240S, 4440) - **AR79680** (length = 360 mm)

Never clean! Replace **annually**

ENGINE

FUEL FILTER - AR50041

4 cyl. - Replace **every 1.000 hours**

6 cyl. - Replace **every 500 hours**

CAB (with roof hatch)

AIR FILTER


(1640 - 3140 from serial no. 430000;
3640, 3640S)

L38596 - (C) please order 2

L57652 (D)

R69180 (E)

Clean as required, replace **annually**

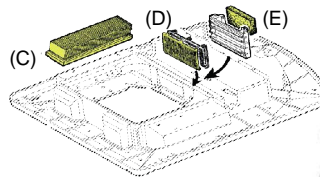

TRANSMISSION

OIL FILTER

(840 - 3640S without HFWD) - **AR75603** (length = 139 mm)

(1640 - 4440 with HFWD; not for: 4040S, 4240S)

- **AR98098** (length = 203 mm)

(4040 - 4440 without HFWD; 4040S, 4240S)

- **AR94510** (length = 203 mm)

Replace after **50 hours** and then **every 500 hours**

4040 - 4440 with Syncro-Range and Quad-Range:
Replace after **100 hours** and then **every 200 hours**

4040 - 4440 with Power Shift transmission :
Replace after **100 hours** and then **every 600 hours**

HYDRAULICS

OIL FILTER

(1640 - 3140 from serial-no. 430000; 3640, 3640S,
not for: 1840)

AL156625 (length = 151.6 mm)

AL56469 (length = 178.5 mm)

RE34958 (length = 245 mm)

Replace after **50 hours** and
then **every 500 hours**

TRANSMISSION

SCREEN, OIL PUMP INTAKE

(not for: 4040S, 4240S) - **R53169**

Clean as required, replace **as required**

ENGINE

OIL FILTER

(not for: 4240 - 4440) - **T19044**

(4240 - 4440) - **AR43634**

Replace after **100 hours** and
then **every 200 hours**

